

Economy Panelmeter EP 9648

Industry standard signals 0/4-20mA; 0-10V; PT100

Features

- Input programmable
- Display range voltage, current -1999 ... 2000 Digit
RTD, Pt100 -100.0 ... 200.0, or -100 ... 400 °C
- LED Display 14.2 mm or 20.3mm red
- Indicating range and decimal point
- free programmable
- Conversion rate programmable 8/s, 2/s, 0.5/s
- Self-acting display brightness (Option)
- Analog output 0 ... 10 V DC
- Front protection IP65



EP9648 with LED Display 20.3mm

General

The Economy Panelmeter EP9648 is a technical advancement of the DP9648. With universal input conditions and easy programming the panelmeter becomes a powerful instrument for monitoring, measurement and control applications. As highlight the device offers a self-acting display brightness.

A built-in photo sensor controls the ambient brightness and corrects the display brightness.

Technical Data

Power supply

Supply voltage	: 230/115 V AC 50/60 Hz ±10 % or 24 V DC ±20 %
Power consumption	: 3 VA
Working temperature	: -10 ... +60 °C
Rated voltage	: 250V ~ acc. VDE 0110 between input, output/supply voltage Degree of pollution 2, over-voltage categoric III
Test voltage	: 4 kV=, between input, output/supply voltage
Conformity	: CE

Input

Current input	: 0/4 ... 20 mA	Ri 10 Ω	overload max. 3-times
Voltage input	: 0 ... 10 V	Ri 100 kΩ	overload max. 3-times
RTD (Pt100)	: -100...400C	sensor current < 1mA (no self heating)	
Accuracy	: voltage/current	±0.1 %, ±1 Digit;	
	RTD (Pt100)	±0.2 °C, ±1 Digit	

Temperature coefficient

Voltage/current	: 0.005 %/K
RTD (Pt100)	: 0.01 °C/K

Display

Indicating range	: LED 14.2 mm or 20.3 mm red
Decimal point	: -1999 ... 2000 Digit, leading zero suppression
Overflow indication	: programmable
Display brightness (Option)	: overflow " -1999 " or " 9999 " flashing with 2 Hz step less from 2 ... 100 %, with photo sensor


Analog output

Voltage	: 0 ... 10 V DC max. 5 mA, linearized, short circuit proof
Accuracy	: 0.1 %
Temperature coefficient	: 0.005 %/K




Case

Dimensions	: DIN 96x48 mm, material PA6-GF; UL94 V-0
Weight	: Front 96x48 mm, mounting depth 100 mm
Connection	: 300 g
Protection	: clamp terminals, 2 mm² single wire, 1.5 mm² flexible wire, AWG14 front IP65, terminals IP20, finger safe acc. German BGV A3

Connection diagram

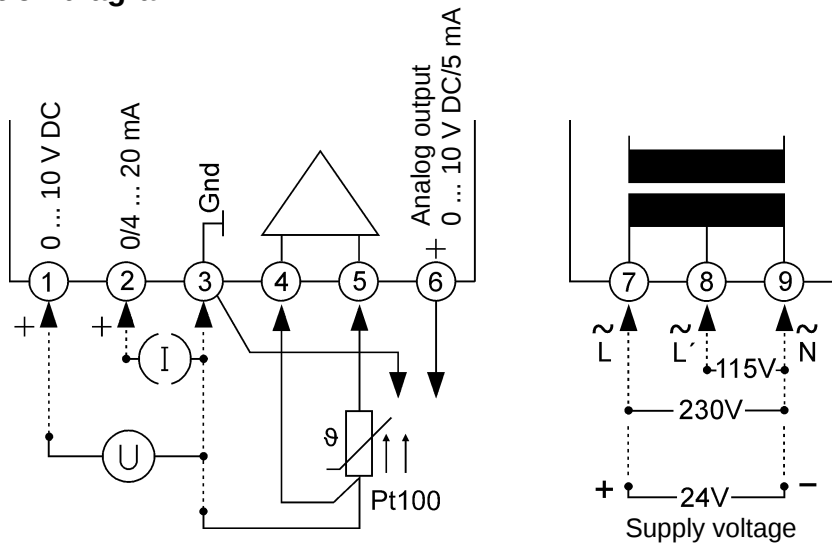

Dimensions

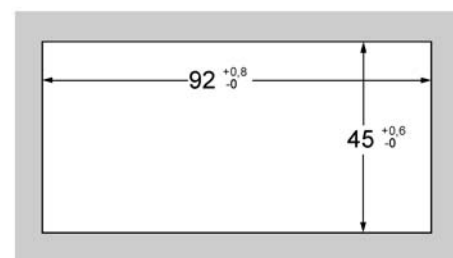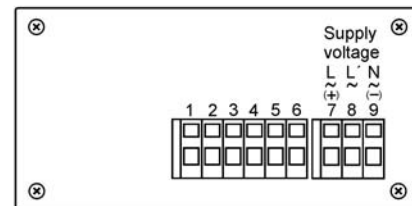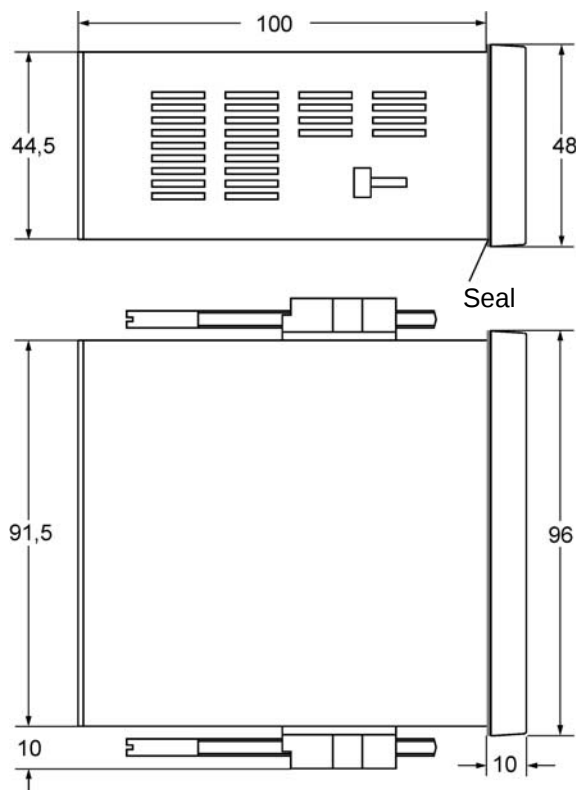

Panel cut-out

Displays and controls



Description

After switching on the supply voltage, the device initializes itself. The display shows the message *Init*.

After the initializing procedure the device is located in the Working level.

Activating the button  for more than 2 seconds, the program is located in the Configuration level.

Selection within a parameter or entering data, use buttons  and . To change the selected parameter press button  again. Setting of the value or selection with button  and . Entering data with button .

After finishing the configuration or when longer than 2 minutes no button was pushed, the program jumps back to the working level. Leaving the configuration level is possible at any time by pushing the button  for 2 seconds.

Error codes

Display flashes *Err* input signal is more than 3% outside of the programmed measurement range

Err please ship the panelmeter to factory for repair service.

Loc Program lockout. See configuration page 4.

Start-up note:


Before the device can be used, it must be configured for the intended use.

Please note: All parameters can be called if they are not blocked by other programmed parameters and if they are available. Factory settings are shown in the display graphic.



Parameter is only displayed if included (see order code)

Configuration

Button	Display	Description
 Press 2 sec.		Conversion rate Press button  <i>8 r t</i> 8 measurements per second <i>2 r t</i> 2 measurements per second <i>0.5 r t</i> 0.5 measurements per second Selection with button  and  . Entering with button  .
		
		Input signal Press button  <i>0 - 10,0 - 20,4 - 20, P t</i> Selection with button  and  . Entering with button  .
		
		Decimal point position* Press button  <i>0. 0 .00 .000</i> Selection with button  and  . Entering with button  .
		

Button	Display	Description
↓	St.	Start value for indicating range* Press button  Setting possible from -1999 ... 2000 Digit with button  and  . Entering with button  .
↓	En.	End value for indicating range* Press button  Setting possible from -1999 ... 2000 Digit with button  and  . Entering with button  .
↓	corr.	Indicating correction Press button  Setting possible from -9.9 ... 9.9 Digit with button  and  . Entering with button  .
↓	di	Self-acting display brightness (only with Option 07) Press button  on, off Selection with button  and  . Entering with button  .
↓	code	Code for factory settings.
↓	Loc	Parameter lockout Press button  off : no lock on : Parameter locked Selection with button  and  . Entering with button  .
↓	2000	Back to the working level *Restrictions for Pt100

Ordering code

EP9648 - 1. - 2. - 3. - 4. - 5. - 6.

1. Display

1 LED red 14.2 mm
3 LED red 20.3 mm

2. Device type

15 Standard signal
0/4 ... 20 mA, 0 ... 10 V DC and Pt100

3. Supply voltage

0 115/230 V AC ±10 % 50-60Hz
5 24 V DC ± 20%

4. Options

00 without options
07 self-acting display brightness*

5. Unit (appears on the unit field)

6. Additional text (appears on the face plate in the field for additional text max. 3 mm x 90 mm HxW)