

Operating manual
Conductivity measuring device
with data logger

as of version 1.3

GMH 3451**senseca****Please note our new name:****Senseca Germany GmbH****Hans-Sachs-Straße 26, 93128 Regenstauf, Germany***Documents are in the process of being changed.*

-  Please carefully read these instructions before use!
-  Please consider the safety instructions!
-  Please keep for future reference!

**Made in
Germany**

WEEE-Reg.-Nr. DE 93889386

Index

1	GENERAL NOTE	3
2	SAFETY	3
2.1	INTENDED USE.....	3
2.2	SAFETY SIGNS AND SYMBOLS.....	3
2.3	SAFETY GUIDELINES	3
3	PRODUCT SPECIFICATION.....	4
3.1	SCOPE OF SUPPLY	4
3.2	OPERATION AND MAINTENANCE ADVICE	4
4	HANDLING	5
4.1	DISPLAY ELEMENTS.....	5
4.2	PUSHBUTTONS.....	5
4.3	CONNECTIONS	5
4.4	POP-UP CLIP	6
5	START OPERATION.....	6
6	PRINCIPLES OF THE MEASUREMENTS.....	7
6.1	BASICS ABOUT CONDUCTIVITY	7
6.2	CONDUCTIVITY MEASUREMENT	7
6.3	RESISTIVITY MEASUREMENT	7
6.4	TDS MEASUREMENT.....	7
6.5	SALINITY MEASUREMENT.....	7
6.6	ELECTRODES / MEASURING CELLS.....	8
6.6.1	<i>Design</i>	<i>8</i>
6.6.2	<i>Calibration / Adjustment of measuring cells.....</i>	<i>8</i>
6.7	TEMPERATURE COMPENSATION	8
6.7.1	<i>Temperature compensation “nLF” according to EN 27888</i>	<i>8</i>
6.7.2	<i>Linear temperature compensation and determination of temperature coefficient “t.Lin”</i>	<i>8</i>
7	CONFIGURATION	9
8	DATA LOGGER	11
8.1	MANUAL RECORDING (“FUNC-STOR”).....	11
8.2	AUTOMATIC RECORDING WITH SELECTABLE CYCLE TIME “FUNC CYCL”	12
9	UNIVERSAL OUTPUT	13
9.1	SERIAL INTERFACE	13
9.2	ANALOGUE OUTPUT	14
10	ADJUSTMENT OF TEMPERATURE INPUT.....	14
11	AUTOMATIC ADJUSTMENT/CALIBRATION OF CELL CORRECTION	15
12	GLP.....	15
12.1	CALIBRATION INTERVAL (C.INT).....	15
12.2	CALIBRATION STORAGE (READ CAL).....	16
13	ALARM („AL.“).....	16
14	REAL TIME CLOCK (“CLOC”).....	16
15	ACCURACY CHECK / ADJUSTMENT SERVICE	16
16	ERROR AND SYSTEM MESSAGES	17
17	RESHIPMENT AND DISPOSAL.....	17
17.1	RESHIPMENT	17
17.2	DISPOSAL INSTRUCTIONS.....	18
18	SPECIFICATION.....	18

1 General Note

Read this document carefully and get used to the operation of the device before you use it. Keep this document within easy reach near the device for consulting in case of doubt.

2 Safety

2.1 Intended Use

The device is designed for measuring conductivity, resistivity, salinity and TDS in fluids – using a permanently connected electrode (measuring cell).

It is designed for the mobile use or the stationary operation in a controlled electromagnetic environment (lab).

Personnel which starts up, operates and maintains the device has to have sufficient knowledge of the measuring procedure and the meaning of the resulting measured values, this manual delivers a valuable help for this. The instructions of the manual have to be understood, regarded and followed.

To be sure that there's no risk arising due to misinterpretation of measured values, the operator must have further knowledge in case of doubt - the user is liable for any harm/damage resulting from misinterpretation due to insufficient knowledge.

The manufacturer will assume no liability or warranty in case of usage for other purpose than the intended one, ignoring this manual, operating by unqualified staff as well as unauthorized modifications to the device.

2.2 Safety signs and symbols

Warnings are labelled in this document with the followings signs:



Caution! This symbol warns of imminent danger, death, serious injuries and significant damage to property at non-observance.



Attention! This symbol warns of possible dangers or dangerous situations which can provoke damage to the device or environment at non-observance.



Note! This symbol point out processes which can indirectly influence operation, possibly cause incorrect measurement or provoke unforeseen reactions at non-observance.

2.3 Safety guidelines

This device has been designed and tested in accordance with the safety regulations for electronic devices. However, its trouble-free operation and reliability cannot be guaranteed unless the standard safety measures and special safety advises given in this manual will be adhered to when using the device.

1. Trouble-free operation and reliability of the device can only be guaranteed if the device is not subjected to any other climatic conditions than those stated under "Specification".
If the device is transported from a cold to a warm environment condensation may cause in a failure of the function. In such a case make sure the device temperature has adjusted to the ambient temperature before trying a new start-up.
2.  If there is a risk whatsoever involved in running it, the device has to be switched off immediately and to be marked accordingly to avoid re-starting.
Operator safety may be a risk if:
 - there is visible damage to the device
 - the device is not working as specified
 - the device has been stored under unsuitable conditions for a longer time.In case of doubt, please return device to manufacturer for repair or maintenance.

3. When connecting the device to other devices the connection has to be designed most thoroughly as internal connections in third-party devices (e.g. connection GND with protective earth) may lead to undesired voltage potentials that can lead to malfunctions or destroying of this device and the connected devices.



This device must not be run with a defective or damaged power supply unit.
Danger to life due to electrical shock!

4.  Do not use these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury or material damage. Failure to comply with these instructions could result in death or serious injury and material damage

5.  This device must not be used at potentially explosive areas!
The usage of this device at potentially explosive areas increases danger of deflagration, explosion or fire due to sparking.

6.  This device is not constructed for use in medical applications.

7.  The analog output is designed to output the current measured value and may only be used in a non-process-relevant manner in applications where no personal or material damage can occur.

3 Product Specification

3.1 Scope of supply

The scope of supply includes:

- GMH 3451, incl. 9V-battery
- Operating manual

3.2 Operation and maintenance advice

1. Battery operation:

If  and 'bAt' is shown in the lower display the battery has been used up and needs to be replaced. However, the device will operate correctly for a certain time. If 'bAt' is shown in the upper display the voltage is too low to operate the device; the battery has been completely used up.



The battery has to be taken out, when storing device above 50°C. We recommend taking out battery if device is not used for a longer period of time.
After recommissioning the real-time clock has to be set again.

2. Treat device and sensor carefully. Use only in accordance with above specification. (do not throw, hit against etc.). Protect plug and socket from soiling.
3. Mains operation with power supply:



When using a power supply please note that operating voltage has to be 10.5 to 12 V DC. Do not apply overvoltage!! Cheap 12V-power supplies often have excessive no-load voltage. We, therefore, recommend using regulated voltage power supplies.


Prior to connecting the power supply to the mains make sure that the operating voltage stated at the power supply is identical to the mains voltage.

The external supply must not have a galvanic connection to the measurement medium, as this can influence the measurement and thus lead to measurement errors.

Trouble-free operation is guaranteed by our power supply GNG10/3000.


4 Handling

4.1 Display elements

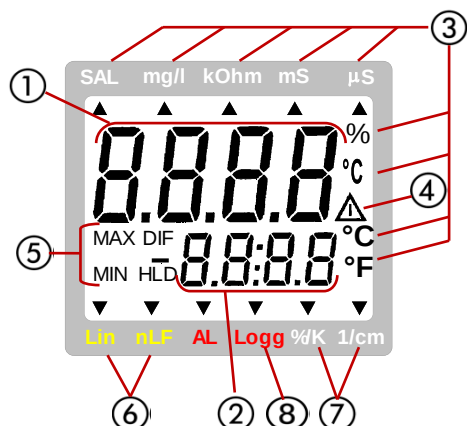


1	Main display:	conductivity (mS/cm, μ S/cm) resistivity (k Ω cm) TDS / total dissolved solids (mg/l) salinity (SAL)
2	Secondary display:	measuring value temperature
3	Arrows to selected	measuring unit
4	Warning signal:	indicates low battery or missing calibration
5	Display elements to show minimum / maximum / memorized measuring value	
6	nLF, Lin:	display element for selected temperature compensation
7	%/K, 1/cm:	additional configuration units
8	logg-arrow:	logger is ready arrow flashing: automatic recording (Logg CYCL) is active

4.2 Pushbuttons

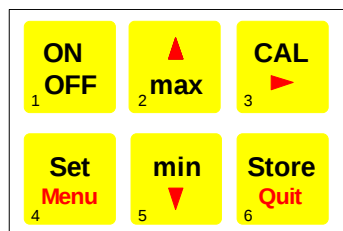

	On / Off key press shortly: switch on/off instrument
	Set / Menu: press shortly: change-over between measuring units (only if „InP: SET“ is selected) press for 2 sec. (menu): invoke configuration menu
	min/max when taking measurements: press shortly: min. or max. value is displayed press for 2 sec: the corresponding value is deleted
	Configuration: to enter values or change settings
	CAL: only at mode 'cond'=conductivity: press for 2 sec: start cell correction adjustment
	Store/Quit: Logger off: hold and save current measuring value ('HLD' is displayed) Logger on: Operation of data logger – chapter 8 Set/Menu: confirm settings, return to measuring

4.3 Connections

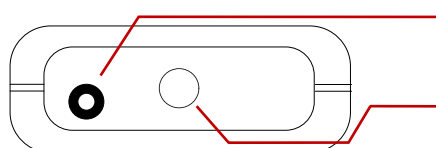

Universal output: interface, analog output (see chapter 9 “Universal output”)

Permanently connected measuring cell with integrated temperature probe

Power supply:

The mains socket (1.9 mm inner diameter) is located at the left side of the instrument for 10.5-12 V DC supply




All contacts have to be protected against dirt and moisture!

4.4 Pop-up clip


Handling:

- Pull at label "open" in order to swing open the pop-up clip.
- Pull at label "open" again to swing open the pop-up clip further.

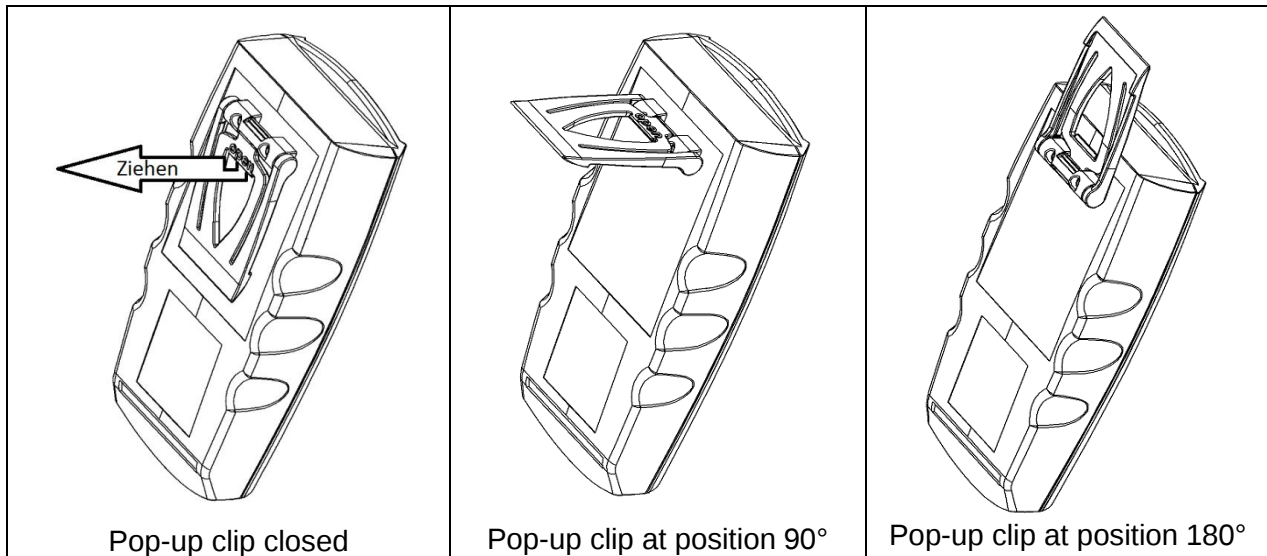

Function:

- The device with a closed pop-up clip can be plainly laid onto a table or attached to a belt, etc.
- The device with pop-up clip at position 90° can be set up on a table, etc.
- The device with pop-up clip at position 180° can be suspended from a screw or the magnetic holder GMH 1300.

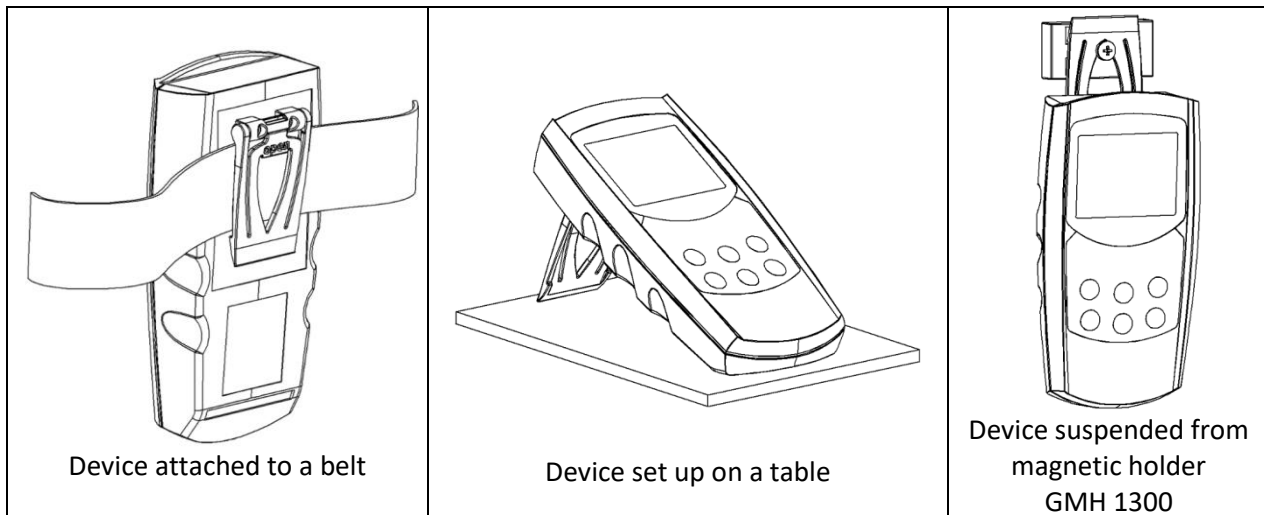

5 Start Operation

Turn device on via  key.

After segment test  the device displays some information on its configuration:

5LL if cell correction scale was changed (cell correction scale unequal 1.000)
(see chapter 11 Automatic adjustment/calibration of cell correction)

Corr if zero point or slope correction is active
(see chapter 10 Adjustment of temperature input)

After that the device is ready for measuring.

6 Principles of the measurements

6.1 Basics about conductivity

Definition of conductivity: The ability of a material to conduct electric current: $\gamma = \frac{1}{R \cdot A}$

L: length of the material

A: diameter

R: measured resistance

Unit $[\gamma] = \frac{\text{Siemens}}{\text{meter}} = \frac{\text{S}}{\text{m}}$, common for liquids: $\frac{\text{mS}}{\text{cm}}$ and $\frac{\mu\text{S}}{\text{cm}}$

The conductivity is the reciprocal value of the resistivity.

(The conductance is the reciprocal value of the measured resistance R)

6.2 Conductivity measurement

The conductivity measurement is a rather uncomplicated measurement. The standard electrodes are stable for a long time if used correctly and can be adjusted by an integrated Cal-function.

Measuring ranges: 0.0 - 200.0 $\mu\text{S/cm}$ | 0 - 2000 $\mu\text{S/cm}$ | 0.00 - 20.0 mS/cm | 0.0 - 200.0 mS/cm | 0 - 400 mS/cm

If the range selection is set to „Auto Range“, the range with the best resolution is automatically selected. In this case, the output value of the interface will always be the measured value with the highest possible resolution (e.g. display value: 187.6 mS/cm $\Rightarrow$ interface output: 187600.0 $\mu\text{S/cm}$).

6.3 Resistivity measurement

The resistivity is the reciprocal value of the conductivity and the device displays it in $\text{k}\Omega\cdot\text{cm}$.

Measuring ranges: 0.000 - 2.000 $\text{k}\Omega\cdot\text{cm}$ | 0.00 - 20.00 $\text{k}\Omega\cdot\text{cm}$ | 0.0 - 100.0 $\text{k}\Omega\cdot\text{cm}$

If the range selection is set to „Auto Range“, the range with the best resolution is automatically selected. However, logger or interface operation requires a manual/fixed selection of the measuring range from the table above (No logger/interface operation with Auto-range!).

6.4 TDS measurement

At the TDS (total dissolved solids) measurement the filtrate dry residue is determined by means of the conductivity and a conversion factor (C.tdS). Well suited for easy concentration measurements of e.g. salt solutions. The determined value is displayed in mg/l .

Measuring ranges: 0.0 - 200.0 mg/l | 0 - 2000 mg/l

If the range selection is set to „Auto Range“, the range with the best resolution is automatically selected. In this case, the output value of the interface will always be the measured value with the highest possible resolution (e.g. display value: 1876 mg/l $\Rightarrow$ interface output: 1876.0 mg/l).

Displayed value TDS = conductivity [in $\mu\text{S/cm}$, nLF-temp. comp. at 25°C] • C.tdS (input at menu)

Approximately:

C.tdS	
0.50	Monovalent salts with 2 ion types (NaCl, KCl, etc.)
0.50	Natural waters / surface waters, drinking water
0.65 - 0.70	e.g. salt concentration of aqueous fertilizer solutions

Attention: This are only approximate values – good for estimations, but no precise measurement.

For precise measurements the conversion value has to be determined for the corresponding solution for the relevant concentration range.

This may be done by comparison with known reference solutions or by actually evaporating a certain amount of solution with determined conductivity and subsequent weighing of the dry residue.

6.5 Salinity measurement

At the salinity measurement “SAL” the salinity (salt content) of seawater is determined (based on: International Oceanographic Tables; IOT). Standard seawater has a salinity of 35 ‰ (35 g salt per 1 kg seawater). Commonly the measured value is displayed dimensionless in ‰ (g/kg).

Additionally the term “PSU” (Practical Salinity Unit) is sometimes used, the displayed value is the same.

The salinity measurement has its “own” temperature compensation, i.e. the temperature is automatically taken into account for the salinity measurement. The menu settings regarding the temperature compensation are ignored.




The salt composition of the different seas is not the identical. Depending on place, weather, tides, etc. there may be considerable divergences to the 35 ‰ according to IOT. Additionally the salt composition may influence the ratio between salinity and actual salt content.


6.6 Electrodes / measuring cells

6.6.1 Design

Basically there are two types of measuring cells: 2-pole and 4-pole cells. The operation is done similarly; the 4-pole measuring cells can compensate polarization effects and – up to some degree – soiling due to its complex measuring method.

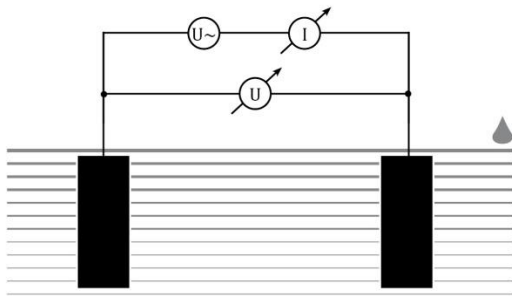

2-pole measuring cell

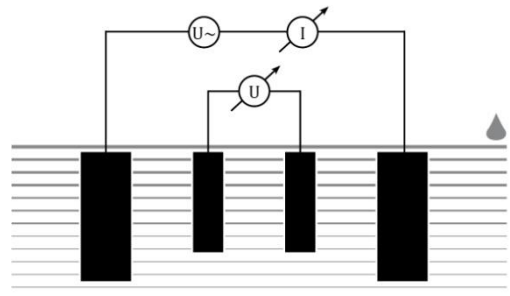

4-pole measuring cell

6.6.2 Calibration / Adjustment of measuring cells



Especially in harsh environments and over long time the cell constants of measuring cells are drifting. Depending on the application and use we recommend a regular checking of the precision of the measuring chain: instrument + cell.

For this there are control solutions available (GKL 100, 101, 102). At normal use a checking each half year is recommended (see chapter 11 Automatic adjustment/calibration of cell correction). A system check at the manufacturer is recommended in case of doubt: see chapter 15 Accuracy Check / Adjustment Service).

6.7 Temperature compensation

The conductivity of aqueous solutions depends on its temperature. The temperature dependency is strongly dependent on the type of solution. The temperature compensation recalculates solutions' conductivity to a consistent reference temperature. The most common reference temperature is 25 °C.

6.7.1 Temperature compensation “nLF” according to EN 27888

For most applications (e.g. in the area of fish farming, surface or drinking water measurements, etc.) the non-linear temperature compensation for natural water (“nLF”, according to EN 27888) is sufficiently accurate. The common reference temperature is 25 °C.

Recommended application range of nLF-compensation: between 60 µS/cm and 1000 µS/cm.

6.7.2 Linear temperature compensation and determination of temperature coefficient “t.Lin”

If the actual function needed for exact temperature compensation is not known, “linear temperature compensation” is normally selected (Menu, t.Cor = Lin, t.Lin corresponds TK_{lin}), i.e. one assumes that the actual temperature dependency at the considered concentration range is approximately equal:

$$LF_{Tref} = \frac{LF_{Tx}}{1 + \frac{TK_{lin}}{100\%} \cdot (Tx - Tref)}$$

Temperature coefficient of about 2.0 %/K are most common.

A temperature coefficient can be determined for example by measuring a solution with deactivated temperature compensation at two different temperatures (T1 and T2).

$$TK_{lin} = \frac{(LF_{T1} - LF_{T2}) \cdot 100\%}{(T1 - T2) \cdot LF_{T1}}$$

TK_{lin} is the value input at the menu “t.Lin”.

LF_{T1} conductivity at temperature T1

LF_{T2} conductivity at temperature T2

7 Configuration



Some menu points depend on current device settings (e.g. some points are locked if logger memory contains data sets).




To change device's settings, press „Menu“  for 2 seconds. This will activate the configuration menu (main display: "SEt"). Pressing „Menu“  changes between the menus points, pressing   jumps to the referring parameters, which can be selected with key . The parameter value can be changed with  or . Pressing „Menu“  again jumps back to the main configuration menu and saves the settings. Pressing „Quit“  finishes the configuration.



Pressing "menu" and "store" at the same time for more than 2 seconds will reset the device to factory defaults.

If there are data sets stored and logger is set to "manual recording" ("Func Stor") the first menu point displayed is "rEAd Logg" (see chapter "8 Data Logger")

If no key is pressed for more than 2 minutes the configuration will be aborted. All changes will be discarded!

Menu	Parameter	Value	Description		
		 or 			
	rEAd Logg: Read manual recordings, see chapter 8.1 Manual recording ("Func-Stor")				
	Set Configuration: General configuration				
	Input: Selection of measured variable			**	
	Cond	Conductivity			
	rESi	Resistivity			
	tdS	Total dissolved solids			
	SAL	Salinity			
	SEt	Change-over measured variables by Set-key			
	TDS measurement: conversion factor (only if Inp = tdS)				
	0.40 - 1.00	Conversion factor for TDS measurement			
	Cell Corr: Adjustment of cell correction: multiplication factor				
	0.800 - 1.200	Multiplication factor of cell correction Factory setting: 1.000			
	Range: Selection of display range (conductivity, resistivity or tdS)				
	Auto	Automatic range selection			
	200.0 µS/cm	Lowest selectable range (conductivity)			
	...	...			
	400 mS/cm	Highest selectable range (conductivity)			
	Automatic adjustment/calibration with reference solution (only if Inp = Cond)				
	Edit	Manual adjustment to reference value			
	REF.S: Choice of standard reference solutions for automatic adjustment/cal.				
	1413 µS/cm	Reference solution 0.01 M KCL			
	2760 µS/cm	0.02 M KCL			
	12.88 mS/cm	0.1 M KCL			
	50 mS/cm	Sea-water reference solution KCL			
	111.8 mS/cm	1 M KCL			
	Unit t: Selection of temperature unit				
	°C	All temperature values in degree Celsius			
	°F	All temperature values in degree Fahrenheit			
	Temperature compensation (not for InP = SAL)				
	oFF	No temperature compensation of conductivity measurement			
	nLF	Non-linear function for natural waters according to EN 27888 (ISO 7888), ground, surface and drinking water			
	Compensation coefficient (only if t.Cor = Lin)				
	0.300 3.000	Temperature compensation coefficient in %/K			

Menu	Parameter	Value	Description		
Set Menu	CAL	max or min			
Set Conf	t.ref	Reference temperature of temperature compensation (only if t.Cor = Lin or nLF)			
		25 °C / 77 °F	Reference temperature 25 °C / 77 °F		
		20 °C / 68 °F	Reference temperature 20 °C / 68 °F		
	C.int	Adjustment/Calibration: Adjustment reminder period (factory setting: oFF)			
		1 ...730	Adjustment reminder period (in days)		
		oFF	No adjustment reminder		
	Auto	Auto Hold: Automatic measuring value identification (only if Logger = oFF)			
		on	Auto measuring value identification (only if Logger = oFF) Auto Hold		
		oFF	Standard hold function on key press (only if Logger = oFF)		
	P.oFF	Auto Power-Off : Selection of power-off delay			
Set Out		1...120	Power-off delay in minutes. Device will be automatically switched off as soon as this time has elapsed if no key is pressed/no interface communication takes place.		
		oFF	Automatic power-off function deactivated (continuous operation)		
	Set Output: Configuration of universal output				
	Out	oFF	Interface and analogue output off -> minimal power consumption		
		SEr:	Serial interface activated		
		dAC:	Analogue output activated		
	Adr.	01,11..91	Base address for serial interface communication		
Set Corr	dAR.0	0.0 µS/cm .. 400 mS/cm	Measuring value that should correspond to output 0 V e.g. for 0.0 µS/cm		
	dAR.1	0.0 µS/cm .. 400 mS/cm	Measuring value that should correspond to output 1 V e.g. for 100.0 mS/cm		
	Set Corr: Measurement correction			**	
	OFF5	Zero point adjustment / offset of temperature measurement		**	
		oFF	No zero point adjustment for temperature measurement		
		-5.0 ... 5.0 °C	Offset of temperature measurement in °C		
	SCAL	Slope adjustment of temperature measurement		**	
		oFF	No slope adjustment for temperature measurement		
		-5.00 ... 5.00	Slope correction of temperature measurement in [%]		
	Set Alarm: Configuration of alarm function				
Set AL.	AL. 1	On / No.So	Measuring channel cond/ rES /TDS/ SAL: alarm on with buzzer / without buzzer		
		OFF	No alarm function for measuring channel cond/ rES/ TDS/ SAL		
	A.LLo	0.0 µS/cm .. 400 mS/cm	Min-alarm limit for cond/ rES/ TDS/ SAL (not if AL. 1. oFF)		
	A.LHi	0.0 µS/cm .. 400 mS/cm	Max-alarm limit for cond/ rES/ TDS/ SAL (not if AL. 1. oFF)		
	AL. 2	On / No.So	Temperature measurement: alarm on with buzzer / without buzzer		
		OFF	No alarm function for temperature measurement		
	A.2Lo	-5.0 ..+100.0 °C	Min-alarm limit for temperature (not if AL. 2. oFF)		
	A.2Hi	-5.0 ..+100.0 °C	Max-alarm limit for limit temperature (not if AL. 2. oFF)		
Set Logger	Set Logger: Configuration of logger function			**	
	Func	Selection of logger function		*	
		oFF	No logger activated		
		Stor	Store: Manual recording		
Set CLoc	CYCL	0:01... 60:00	Cycle time in [minutes:seconds] (for cyclic logger)	**	
	Set Clock: Setting of real time clock				
Set CLoc	CLoc	HH:MM	Clock: set time hours:minutes		
	YEAR	YYYY	Year: set year		
	DATE	TT.MM	Date: set date day.month		
rEAd CAL	rEAd CAL: Read calibration data: see chapter 12.2 Calibration storage (rEAd CAL)				

- (*) If logger memory contains data sets parameters marked with (*) cannot be called. You have to clear memory to change these parameters!
- (**) If logger is running parameters marked with (**) cannot be called.

8 Data Logger



No logger operation possible with auto-range! The measuring range has to be selected explicitly – see chapter 7 “Configuration” - rRnB

The device supports two different logger functions:

- “**Func-Stor**”: Manual recording by key press “store”
Additional input of measuring point (L-Id) is needed
- “**Func-CYCL**”: Automatic recording at intervals of set cycle time

The logger stores 2 measuring values per data set.

One data set consists of:

- meas. value cond/ rES/ TDS/ SAL (one of them)
- meas. value temperature
- measuring point L-Id (only for “**Func-Stor**”)
- time and date (when data set is saved)

For the evaluation of the data the software GSOFT3050 (version V3.0 or higher) has to be used. The software also allows easy configuration and starting of the logger.

When the logger is activated (Func Stor or Func CYCL) the hold function is no more available, the key “store” is solely used for the operation of the logger functions.

8.1 Manual recording (“Func-Stor”)

a) Save measurements manually:

Up to 1000 measurements can be saved if logger function “Func store” is selected. (see “Configuration”):



Press “Store” shortly: data set is saved (“St. XX” is displayed shortly, where XX is the number of the data set)

Input of the measuring point “L-Id”: Selection of measuring point via keys  or .
Number 0...19999 or text assigned to number 1...40
(comfortable assignment of texts can be done with gratis software GMHKonfig)

Confirm input with .

If logger storage is full, the following is displayed: 

b) Read manual recordings:

Saved data sets can be viewed both with PC-software GSOFT3050 and directly on the device display.



Press “menu” for 2 seconds:  is displayed



“rEAd LoGG” is only displayed if data sets have been already stored! Otherwise the configuration menu is displayed: 



Press shortly: Change between measuring values, measuring point and date+time of the currently selected data set



or

Change between different data sets



Quit display of recordings

c) Clear manual recordings:

If data sets have been stored, they can be deleted with the “store” key:



Press “store” for 2 seconds: Call menu “Clear”

Select with: or .

Clear nothing (cancel)

Clear all data sets

Clear the latest data set



Confirm selection and quit menu “Clear”

8.2 Automatic recording with selectable cycle time “Func CYCL”

If logger function “Func CYCL” is selected (see “Configuration”) the device will automatically record measuring values at intervals of the set cycle time.

The logger’s cycle time can be set from 1s to 60min (see “Configuration”).

Up to 10000 measurements can be saved if logger function “Func CYCL” is selected.

a) Start recording:



Press “store” for 2 seconds: Start menu, press again: automatic recording is started
Each storage process is signalled by shortly displaying “St.XXXX”, where XXXX is the number of the saved data set.

If the logger memory is full, the recording stops automatically and the display shows

b) Stop recording:



Press “store” for 2 seconds: If recording is running the “stop” menu is displayed

Select with: or .

Do not stop recording (cancel)

Stop recording



If recording is running the “stop” menu is displayed



If you try to switch off the device while cyclic recording is active you will be asked whether the recording should really be stopped. The device can only be switched off if the recording is stopped. Auto-off function is deactivated as long as cyclic recording is active.

c) Clear recordings:



Press “store” for 2 seconds:

If there are data sets stored and recording is already stopped the menu “Clear” is displayed

Select with: or .

Do not stop recording (cancel)

Clear all data sets

Clear latest data set



Confirm selection and quit menu “Clear”

9 Universal output

The output can be used as serial interface (for USB 3100, USB 3100 N, GRS 3100 or GRS 3105 interface adapters) or as analogue output (0-1V).

If none of both is needed, we suggest to switch the output off, because battery life then is extended.



When operating with external supply or connected interface and measurement at solutions with earth connection, there may appear distortions or deviations of the measuring. In case of doubt disconnect supply/interface.

The same is valid for the analogue output: Depending how the output is connected (e.g. even without isolation), in case of doubt do not measure in solutions with earth contact.

9.1 Serial Interface

By means of the serial interface and a suitable electrically isolated interface adapter (USB 3100, USB 3100 N, GRS 3100 or GRS 3105) the device can be connected to a computer for data transfer.

With the GRS 3105 up to 5 devices of the GMH3xxx- series can be connected to one interface (see also manual of GRS 3105). As a precondition the base addresses of all devices must not be identical, make sure to configure the base addresses accordingly (refer menu point "Adr." in chapter 1 "Configuration").

To avoid transmission errors, there are several security checks implemented e.g. CRC.

The following standard software packages are available:

- **GSOFT3050:** Operation and read out of logger function for devices with integrated data logger
- **GMHKonfig:** Software for a comfortable editing of the device (e.g. Material selection...)
- **EBS 20M / 60M:** 20-/60-channel software to display the measuring values

In case you want to develop your own software we offer a **GMH3000-development package** including:

- A universally applicable Windows functions library ('GMH3000.DLL') with documentation that can be used by the most programming languages. Suitable for Windows XP™, Windows Vista™, Windows 7™, Windows 8 / 8.1™, Windows 10™
- Programming examples Visual Studio 2010 (C#, C++ und VB), Testpoint™, LabView™ uvm.

In addition to the operation at a PC the device can be operated with the **GAM 3000** device, to use the alarm function for simple supervision and controlling applications. Just connect a GAM 3000 to the interface, activate the alarm function of the GMH and the relays output is operating.

The device has 2 channels:

- Channel 1: current measuring value Cond, rES, TDS oder SAL (base address)
- Channel 2: temperature value

Supported functions:

1	2	Code	Name/Function	1	2	Code	Name/Function
x	x	0	Read measurement value	x	x	200	Read min display range
x	x	3	Read system state	x	x	201	Read max display range
x		12	Read ID number	x	x	202	Read display range - unit
x	x	22	Read min alarm rail (AL. - AL.Lo)	x	x	204	Read display range - decimal point
x	x	23	Read max alarm rail (AL. - AL.Hi)	x		208	Read # of channels
x	x	176	Read min measuring range	x		222	Read power off time (Conf-P.oFF)
x	x	177	Read max measuring range	x		223	Set power off time (Conf-P.oFF)
x	x	178	Read measuring range unit	x		233	Read real time clock (CLOC)
x	x	179	Read measuring range decimal point	x		234	Set real time clock (CLOC)
x	x	180	Read kind of measuring of sensor	x		240	Reset
x	x	199	Read kind of measuring of display	x		254	Program version



The measuring-/ alarm- and display range values read back from the interface are always in the selected measurement unit!

When using the interface, the auto-range-function should be turned off. If auto-range is activated, the returned value is based on the resolution of the smallest ranges, there may be returned extreme values like 123400.0 µS/cm instead 123.4 mS/cm.

9.2 Analogue Output



ATTENTION

Keep in mind not to connect low-resistive loads to the output, otherwise the output value will be wrong and battery life is decreased. Loads above approx. 10kOhm are uncritical.

The signal conditioning instrument used must be galvanically isolated from the measured medium and any external supply voltage used for the measuring device.


An analogue voltage 0-1V can be tapped at the universal output socket (mode: "Out dAC"). With the DAC.0 and DAC.1 values the output can be rapidly scaled to your efforts.

If the display exceeds the value set by DAC.1, then the device will apply 1V to the output

If the display falls below the value set by DAC.0, then the device will apply 0V to the output

In case of an error (Err.1, Err.2, no sensor, etc.) the device will apply slightly above 1V to the output.

plug wiring:



Attention!

the 3rd contact has to be left floating!

Only stereo plugs are allowed!

10 Adjustment of temperature input

The temperature input can be adjusted with offset and scale. A reasonable adjustment presumes reliable references (e.g. ice water, controlled precision water bath, etc.).

If the inputs are adjusted (i.e. offset and scale are different from default settings) the device will shortly display "Corr" after turned on.

Default setting for offset and scale are 'off' = 0.0, i.e. inputs are not changed.

Zero point correction:

Displayed value = measured value – OFFS


Zero point and slope correction:

Displayed value = (measured value – OFFS) * (1 + SCAL / 100)

Displayed value °F = (meas. value °F - 32°F - OFFS) * (1 + SCAL / 100)

11 Automatic adjustment/calibration of cell correction

Besides the direct input of the cell correction (see below) via the menu ("CELL Corr") the cell correction can also be determined automatically:

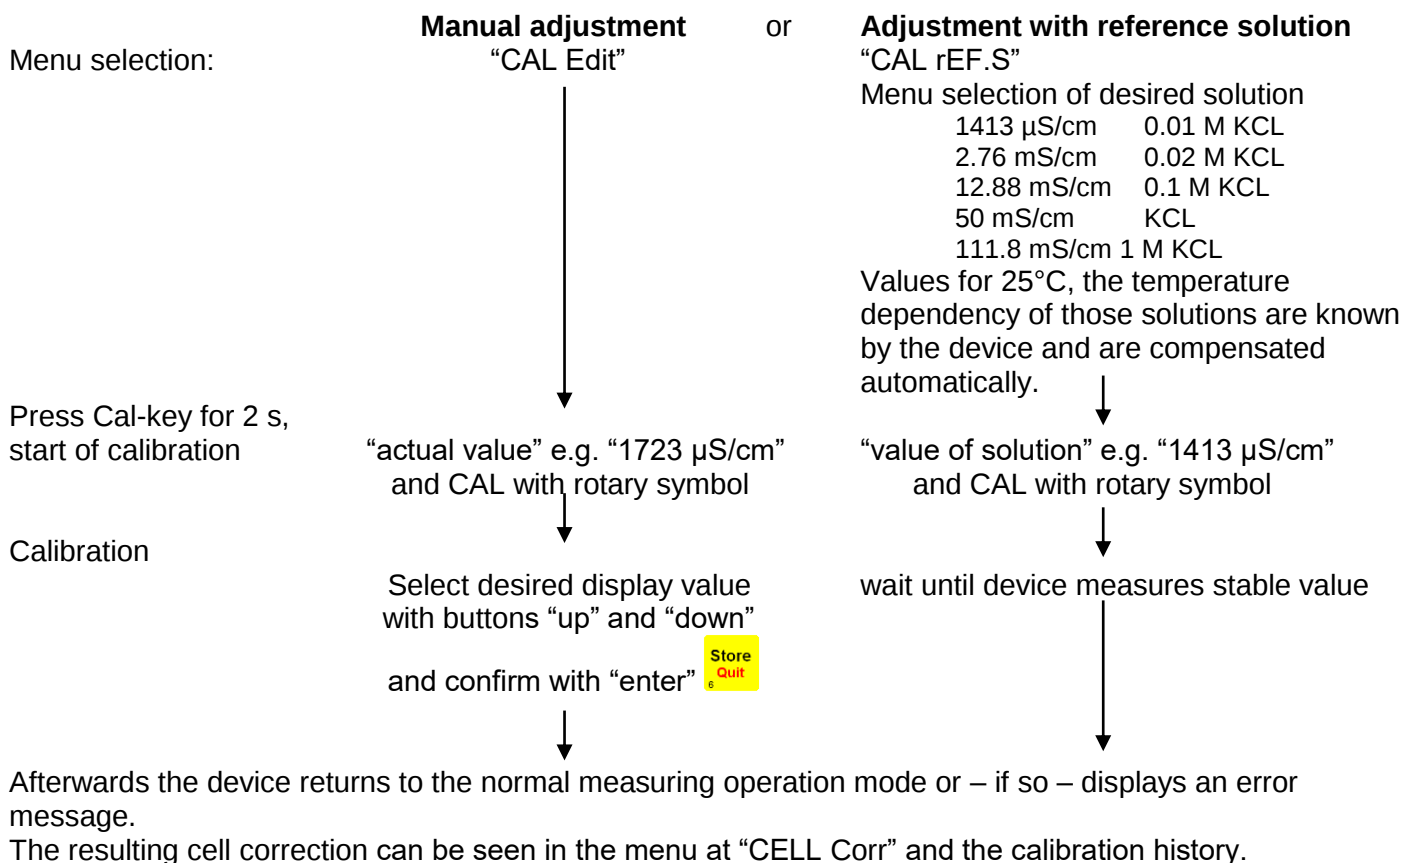

Error messages of automatic adjustment/calibration:

CAL Err.1	Cell correction too high	Determined cell correction must not exceed 1.2
CAL Err.2	Cell correction too small	Determined cell correction must not fall below 0.8
CAL Err.3	Solution of wrong range	Wrong solution / far beyond tolerance
CAL Err.4	Wrong temperature	Beyond permitted temperature: 0.0 – 34.0 °C (or 0.0 – 27.0 °C at 111.8 mS/cm)

Alternative to automatic adjustment:

Manual calculation of cell correction with a reference solution

Example KCl-solution c= 0.01 M: 1413 µS cm⁻¹ at 25°C

At other temperatures switch temperature compensation off (t.Cor = OFF) and use the referring conductivity!

Conductivity_{displayed} = 1500 µS cm⁻¹ if selected cell correction is 1.000 cm⁻¹ (CELL Corr = 1.000)

Conductivity of solution at solution temperature 25 °C: Conductivity_{real} = 1413 µS cm⁻¹

Cell correction c = conductivity_{real} / conductivity_{displayed} [cm⁻¹]
 = 1413 / 1500 * cm⁻¹ = **0.942 cm⁻¹** (Enter CELL Corr of 0.942)

12 GLP

GLP (Good Laboratory Practice) includes regular check of devices and accessories. For pH measurements it is highly important to ensure correct pH calibration. The device provides the following functions to help with this.

12.1 Calibration interval (C.Int)

You can input the interval after which the device reminds you to recalibrate.


The interval times should be chosen according to the application and the stability of the electrode. "CAL" flashes on the display as soon as the interval has expired.

12.2 Calibration storage (rEAd CAL)

The last 16 calibrations are stored with results and date and can be read out.

Display calibration data:

Historical calibration data can be comfortably read out via PC software GMHKonfig and GSOF3050 or displayed directly at the device:

	Press for 2 seconds: The display will show:	 (configuration level)
	Press several times until this is displayed:	 read cal. = "read calibration data"
	Press shortly: switch between: - CELL = cell correction - C.rEF = reference value, at which cell correction has been adjusted - Display of date+time of data set	
 or 	Change between the different calibration data sets	
	Quit calibration data set display	

13 Alarm („AL.“)

There are 3 possible settings:

off (AL.oFF), on with buzzer (AL.on), on without buzzer (AL.no.So).

Alarm is given in the following cases (if alarm active, AL.on or AL.no.So):

- Lower alarm boundary (AL. Lo) under-run
- Upper alarm boundary (AL. Hi) over-rum
- Sensor error
- Low battery (bAt)
- Err.7: system error (always with buzzer!)

In case of an alarm (and when polling the interface) the 'PRIO'-flag is set in the returned interface message.



We suggest to choose a fixed unit for the display (e.g. "lnP cond") when using the alarm function.

ATTENTION If „lnP SEt “ is chosen instead, this may lead to unpredictable behaviour of the alarm.

14 Real Time Clock (“CLOC”)

The real time clock is used for chronological assignment of the logger data and calibration points. Please check the settings when necessary.

15 Accuracy Check / Adjustment Service

You can send the device to the manufacturer for adjustment and inspection.

Calibration certificate - DKD certificate - official certifications:

If the measuring instrument is supposed to receive a calibration certificate, it has to be sent to the manufacturer (declare test points).

If the device is certificated together with a suitable sensor very high overall accuracies are possible.

Basic settings can only be checked and – if necessary – corrected by the manufacturer.

A calibration protocol is enclosed to the device ex works. This documents the precision reached by the production process.

16 Error and System Messages

Error messages for measurement

	Description	What to do?
No display or confused characters, Device does not react on key press	Battery empty	Replace battery
	Mains operation: wrong voltage or polarity	Check power supply, replace it if necessary
	System error	Disconnect battery and power supply, wait shortly, then reconnect
	Device defective	Return to manufacturer for repair
Err.1	Measured value above allowable range	Check: pressure not within sensor range? -> measuring value to high!
	Sensor defective	Return to manufacturer for repair
Err.2	Measured value below allowable range	Check: pressure not within sensor range? -> measuring value to low!
	Sensor defective	Return to manufacturer for repair
Err.7	System error	Return to manufacturer for repair
	Value extremely out of measuring range	Value extremely out of measuring range
----	Could not calculate display value	
	• measuring range or input range exceeded	Check range parameter
	• measured values are instable	Wait for signal regulation of the device
> CAL < CAL flashing in upper display	Either preset calibration interval has expired or last calibration is not valid	Device has to be calibrated!
no Auto Lo55 rAn5	Logger could not be started	Auto range for the display range is active => change the parameter in the configuration menu

Error messages for automatic cell correction adjustment/calibration:

CAL Err.1	Cell correction too high	Determined cell correction must not exceed 1.2
CAL Err.2	Cell correction too small	Determined cell correction must not fall below 0.8
CAL Err.3	Solution of wrong range	Wrong solution / far beyond tolerance
CAL Err.4	Wrong temperature	Beyond permitted temperature: 0.0 – 34.0 °C (or 0.0 – 27.0 °C at 111.8 mS/cm)

If “bAt” is flashing the battery will be exhausted soon. Further measurements are possible for short time. If “bAt” is displayed continuously the battery is ultimately exhausted and has to be replaced. Further measurements aren't possible any more.

17 Reshipment and Disposal

17.1 Reshipment



All devices returned to the manufacturer have to be free of any residual of measuring media and other hazardous substances. Measuring residuals at housing or sensor may be a risk for persons or environment



Use an adequate transport package for reshipment, especially for fully functional devices. Please make sure that the device is protected in the package by enough packing materials.

17.2 Disposal instructions



Batteries must not be disposed in the regular domestic waste but at the designated collecting points.

The device must not be disposed in the unsorted municipal waste! Send the device directly to us (sufficiently stamped), if it should be disposed. We will dispose the device appropriate and environmentally sound.

Private end users in Germany have the possibility of dropping off the device at the municipal collection centre.

Batteries must be removed beforehand!

18 Specification

Measuring ranges	Anzahl	5
	Conductivity 1 *)	0.0 ... 200.0 µS/cm
	" 2 *)	0 ... 2000 µS/cm
	" 3 *)	0.00 ... 20.00 mS/cm
	" 4 *)	0.0 ... 200.0 mS/cm
	" 5 *)	0 ... 400 mS/cm
	Resistivity	0.005 ... 100.0 kOhm*cm
	TDS	0.0 ... 1999 mg/l
	Salinity	0.0 ... 70.0 g/kg (PSU)
	Temperature	-5.0 ... +100.0 °C 23.0 ... 212.0 °F
Accuracy	Conductivity	±0.5% of m.v. ±0.3 % FS or ±2 µS/cm
	Temperature	±0.2% of m.v. ±0.3 K
Connections	Conductivity/ Temperature	Permanently connected measuring cell
	Interface Analogue output	Serial interface (3.5mm jack) can be connected to USB or RS232 interface of a PC via electrically isolated interface adapter USB3100, USB 3100 N, GRS3100 or GRS3105 (see accessories). Alternative selectable analogue output 0-1V (max. permitted connection length = 2m)
Measuring cell		Four-electrode-conductivity-measuring cell with integrated temperature sensor
	Electrode material	special graphite
	Shaft material	epoxy
	Size	dia. 12 mm, length 120 mm
	Ambient condition	-5 ... +80°C (continuous) up to +100°C (short-duration)
Display		4 digit 7-segment (main and secondary display) with additional symbols
Additional functions		Min / max / hold
Adjustment/Calibration		Cell correction manually or automatically via selectable reference solution
Data logger		Real-time clock
		Cyclic: 10000 data sets, cycle time selectable: 1s ... 60 min
		Single: 1000 data sets (with measuring point input, 40 selectable measuring point texts or numbers)
Alarm		2 alarm channels with separate limit values for conductivity (or resistivity, TDS, SAL) and temperature
		Alerting: buzzer / visual / interface
Housing		Break-proof ABS housing
	Protection class	Front side IP65
	Dimensions	142 x 71 x 26 mm (L x W x H)
Working conditions		-25 to 50 °C; 0 to 95 %RH (non condensing)
Storage temperature		-25 to 70 °C
Power supply		9V-battery (included in scope of supply) or external
	Current consumption	2 mA (Out = Off)
	Battery indicator	Automatically if battery exhausted Δ and 'bAt'
Auto-Off-Function		Device will be automatically switched off if no key is pressed/no interface communication takes place for the time of the power-off delay. The power-off delay can be set to values between 1 and 120 min.; it can be completely deactivated.
Directives and standards		The instruments confirm to following European Directives: 2014/30/EU EMC Directive 2011/65/EU RoHS Applied harmonized standards: EN 61326-1 : 2013 emissions level: class B emi immunity according to table A.1 and 3 ¹⁾ Additional fault: <1% EN IEC 63000 : 2018 ¹⁾ = In the case of conducted interference radiation in the range of 5 - 50 MHz, interference of the analog output can occur at the level of the maximum output voltage range.